Remove the Neck Strap and Chin Pad from the Headmaster Collar.



Bend Headmaster Collar to the desired height and fit according to directions enclosed with collar.

· Clip Top Tube on to the Collar



- Push the clip over the seam of the fabric
- Clip has a cut out at an angle for easier attachment

ckSolutions.com

Replace Chin Pad (included with the Anterior Support Tube)



 
Mark the desired length of the long tube and cut it to length

- Trim the fabric cover with scissors to cover the tubes
- Slide the fabric cover on to the long tube





Connect the short tube to the long tube





Replace the Neck Strap



Note: The original Chin Pad may be used as a spare if you punch a hole underneath it.